



DISPATCH-15

User Guide

The Klein Electronics DISPATCH-15 model PTT (Push-To-Talk) switch offers ease of use and ruggedly built functionality.

Plug the large dual-prong PJ7-style connector into the female jack of your Dispatch Console and the small Quick Disconnect end into your Headset cable.

The DISPATCH-15 push-to-talk button can be adjusted with a screwdriver to be either lockable or nonlockable. When the button is pressed or locked in the ON position, the microphone is turned on (open) and will transmit your voice.

How to select the lockable or nonlockable switch position:

LOCKED POSITION

Note that the selector slot is aligned vertically. The push-to-talk button can be depressed momentarily or locked in the ON position by first depressing then sliding the button until it locks.

UN-LOCKED POSITION

Turn the selector horizontally. The push-to-talk button can be depressed momentarily when you wish to speak.

WARRANTY

A no-hassle 1-Year replacement warranty is included with every Dispatch-15. Simply contact your salesperson today!

FEDERAL COMMUNICATIONS COMMISSION (FCC) INFORMATION

Complies with FCC Requirements - Part 68

1. The FCC has established Rules which permit this device to be directly connected to the telephone network. Standardized jacks are used for these connections. This equipment should not be used on party lines or coin phones.
2. If this device is malfunctioning, it may also be causing harm to the telephone network; this device should be disconnected until the source of the problem can be determined and until repair has been made. If this is not done, the telephone company may temporarily disconnect service.
3. The telephone company may make changes in its technical operations and procedures. If such changes affect the compatibility or use of this device, the telephone company is required to give adequate notice of the change.